



BRD-355A & BRD-355B

Industrial ADSL/VDSL Routers

General information

Legal information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at www.westermo.com

Safety and Regulations

Warning signs are provided to prevent personal injuries and/or damages to the product.

The following levels are used:

Level of warning	Description	Consequence personal injury	Consequence material damage
 WARNING	Indicates a potentially hazardous situation	Possible death or major injury	Major damage to the product
 CAUTION	Indicates a potentially hazardous situation	Minor or moderate injury	Moderate damage to the product
 NOTICE	Provides information in order to avoid misuse of the product, confusion or misunderstanding	No personal injury	Minor damage to the product
 NOTE	Used for highlighting general, but important information	No personal injury	Minor damage to the product

Before installation:

Read this manual completely and gather all information on the product. Make sure that you understand it fully. Check that your application does not exceed the safe operating specifications for this product.



SAFETY DURING INSTALLATION

The product must be installed by qualified service personnel and built in to an apparatus cabinet or similar, where access is restricted to service personnel only.

Refer to Compliance Information to see the required level of qualified service personnel according to safety standards.

During installation, ensure a protective earthing conductor is first connected to the protective earthing terminal (only valid for metallic housings). Westermo recommends a cross-sectional area of at least 4 mm².

If the product does not have a protective earthing terminal, then the DIN-rail must be connected to protective earth. Upon removal of the product, ensure that the protective earthing conductor, or the connection to earth via the DIN-rail, is disconnected last.



HAZARDOUS VOLTAGE

Do not open an energized product. Hazardous voltage may occur when connected to a power supply.



PROTECTIVE FUSE

The power supply wiring must be sufficiently fused.

It must be possible to disconnect manually from the power supply. Ensure compliance to national installation regulations.



POWER SUPPLY CONNECTION

There are safety regulations governing the power sources that can be used in conjunction with the product. Refer to Interface Specifications.



REDUCE THE RISK OF FIRE

To reduce the risk of fire, use only telecommunication line cords with a cable diameter of AWG 26 or larger. Regarding power cable dimensions, see Interface Specifications.



ELECTROSTATIC DISCHARGE (ESD)

Prevent electrostatic discharge damages to internal electronic parts by discharging your body to a grounding point (e.g. use a wrist strap).



CABLE TEMPERATURE RATING FOR FIELD TERMINAL WIRES

There may be a requirement on the minimum temperature rating of the cable to be connected to the field wiring terminals, see Interface Specifications.

Care Recommendations

Follow the care recommendations below to maintain full operation of product and to fulfill the warranty obligations:

- Do not drop, knock or shake the product. Rough handling above the specification may cause damage to internal circuit boards.
- Use a dry or slightly water-damp cloth to clean the product. Do not use harsh chemicals, cleaning solvents or strong detergents.
- Do not paint the product. Paint can clog the product and prevent proper operation.

If the product is used in a manner not according to specification, the protection provided by the equipment may be impaired.

If the product is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo technical support.

Product disposal



This symbol means that the product shall not be treated as unsorted municipal waste when disposing of it. It needs to be handed over to an applicable collection point for recycling electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help to reduce hazardous substances and prevent potential negative consequences to both environment and human health, which could be caused by inappropriate disposal.

Simplified EU declaration of conformity

Hereby, Westermo declares that this product is in compliance with applicable EU directives and UK legislations. The full declaration of conformity and other detailed information is available at www.westermo.com/support/product-support.



Agency approvals and standards compliance

Type	Approval / Compliance
EMC	EN 55032, Multimedia equipment, Emission Requirements
	EN 55035, Multimedia equipment, Immunity Requirements
Safety	EN 62368-1, Safety Communication Technology

EN 62368-1

Notice:

This product has been tested and found compliant to EN 62368-1, Safety for Communication Technology. In accordance with the definitions of the standard, this product shall be handled by skilled personell. Energy source classifications are according to following:

Electrical energy source	Power port	ES1
	Serial port	ES1
	Ethernet port	ES1
Power source	Power port	PS3
Thermal energy source	Enclosure	TS1
Mechanical energy source	Enclosure	MS1
Radiation energy source	SFP	Not applicable

UK specific approvals

The BRD-355A has been tested to Openreach BIN-498 (MCT) for VDSL 2 (SoGEA) and PASSED the Gatekeeper 1 and Gatekeeper 2 conformance tests. Check www.westermo.com for compatible software version.


Type tests and environmental conditions

Phenomena	Test	Description	Test levels
ESD	EN 61000-4-2	Enclosure contact	± 6 kV (crit B)
		Enclosure air	± 8 kV (crit A)
Radiated RF immunity	IEC 61000-4-3	Enclosure	20 V/m (crit A) (80 – 6000 MHz)
Fast transient	EN 61000-4-4	DC power ports	± 2 kV (crit B)
		Ethernet ports	± 2 kV (crit B)
		Serial port	± 2 kV (crit B)
		xDSL ports	± 2 kV (crit B)
Surge	EN 61000-4-5	DC power ports	± 2 kV (crit B), 42 Ω ± 500 V (crit A), 12 Ω
		Ethernet ports	± 4 kV (crit B), (shielded cable)
		xDSL ports	± 4 kV (crit B)
RF conducted	EN 61000-4-6	DC power ports	10 V/m, (crit A), (0.15 – 80 MHz)
		Ethernet ports	10 V/m, (crit A), (0.15 – 80 MHz)
		xDSL ports	10 V/m, (crit B), (0.15 – 80 MHz)
			10 V/m (crit B), (0.15 – 80 MHz)
Radiated emission	CISPR 16-2-3	Enclosure	EN 61000-6-3
Conducted emission	CISPR 16-2-1	DC power ports	EN 61000-6-3
	CISPR 32	Ethernet ports	
		xDSL port	
Dielectric strenght	EN 62368-1 IEEE 802.3	Power port to all other ports	1.5 kVrms, 50 Hz, 1 min
		Signal port to all other ports	
		xDSL port to all other ports	
Temperature	EN 60068-2-1 EN 60068-2-2	Operating	–25 to +70°C (–13 to +158°F)
		Storage & Transport	–40 to +85°C (–40 to +185°F)
Humidity	EN 60068-2-30	Operating	0 to 90% relative humidity non condensing.
		Storage & Transport	0 to 90% relative humidity non condensing.
Altitude		Operating	2000 m / 70 kPa
Service life		Operating	10 years
Dimension W × H × D			53 × 103 × 97 mm (2.08 × 4.05 × 3.81 in)
Weight			0.40 kg
Degree of protection	IEC 529	Enclosure	IP 40
Cooling			Convection
Mounting			Horizontal on 35 mm DIN-rail

Description

Remote access removes boundaries, eliminates the need for time consuming site visits and provides a network infrastructure suitable for today's "always-on" society. The BRD-355 is an industrially designed xDSL (ADSL/VDSL2) broadband router built to cope with harsh environments and the characteristics of industrial applications. The unit supports a wide range of xDSL-standards and has support for long lines.

Most devices today comes equipped with an Ethernet port for communications, therefore the BRD-355 has a built-in two port Ethernet switch. For legacy connectivity the unit also features one RS-232-port to provide multiple connection possibilities for both new and legacy replacement installations. Designed to be installed on a DIN-rail all connectors and LEDs have been positioned in the front of the unit, facing the user for easy access and fast status feedback. With wide power input range, the unit can be powered from 10 to 60 VDC and has low power consumption.

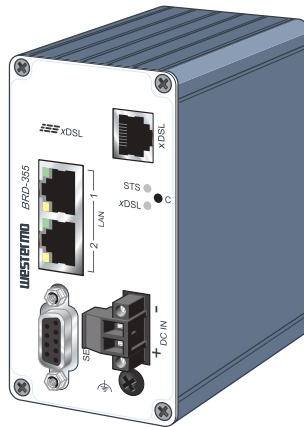

The cybersecurity features of the BRD-355 prevent unauthorized access and secure the communication for Internet-enabled applications. The easy to use firewall filters incoming traffic, allowing only approved packets to pass through. To inter-connect units with each other securely over the Internet multiple VPN technologies are supported, including IPsec and OpenVPN.

Upgrading legacy solutions to become IP-enabled can prove both costly and tedious therefore the BRD-355 includes a wide feature set for various legacy applications including both modem replacement methods as well as serial to Ethernet conversion. If there are applications that require extra attention Westermo's extensive experience from over 35 years within industrial data communications and over 5 years of industrial xDSL expertise will be available to assist you.

Interface specifications

Power	
Rated voltage	12 – 48 VDC
Operating voltage	10 – 60 VDC
Operational current (max)	450 mA @ 12 VDC
Rated current (max)	1000 mA @ 12 VDC
Rated frequency*	DC
Startup current	2 x rated current
Circuit type	SELV/ES1
Cable size	0.2-2.5 mm ² (AWG 24-12)
Cable temperature rating	For minimum temperature rating of the cable to be connected to the field wiring terminals: -25 to + 70 °C
Isolation	To all other ports

*Recommended external supply current capability for proper startup

RS-232	
Electrical specification	EIA RS-232
Data rate	300 bit/s – 115.2 kbit/s
Data format	7 or 8 data bits, Odd, even or none parity, 1 or 2 stop bits
Protocol	Transparent, optimised by packing algorithm
Circuit type	SELV/ES1
Transmission range	15 m / 49 ft
Connection	9 pin D-sub female
Shielded cable	Not required
Conductive housing	Yes
Number of ports	1


Ethernet TX	
Electrical specification	IEEE std 802.3. 2005 Edition
Data rate	10 Mbit/s, 100 Mbit/s, manual or auto
Duplex	Full or half, manual or auto
Circuit type	SELV/ES1
Transmission range	100 m / 328 ft
Isolation to	All other
Connection	RJ-45 auto MDI/MDIX
Shielded cable	Not required
Conductive housing	Yes
Number of ports	2

DSL				
Protocol	LLC/VC-MUX encap Ethernet, PPPoA, PPPoE, IPoA			
Connection	1 x RJ-11			
Technology	Annex/Profile	BRD-355A	BRD-355B	BRD-355A-AU
TI.413		•		•
ADSL	A	•		•
ADSL	B		•	
G.Lite		•		•
ADSL2	A	•		•
ADSL2	B		•	
ADSL2	J		•	
ADSL2	L	•		•
ADSL2	M	•		•
ADSL2+	A	•		•
ADSL2+	B		•	
ADSL2+	J		•	
ADSL2+	M	•		•
VDSL2	8a, 8b, 8c, 8d	•	•	•
VDSL2	12a, 12b	•	•	•
VDSL2	17a	•	•	•
VDSL2 Vectoring		•	•	•

Connections

Ethernet TX Connections
(RJ-45 connector) LAN1-2

Position	Direction	Description
1	In/Out	TD+
2	In/Out	TD-
3	In/Out	RD+
4	-	Not Connected
5	-	Not Connected
6	In/Out	RD-
7	-	Not Connected
8	-	Not Connected

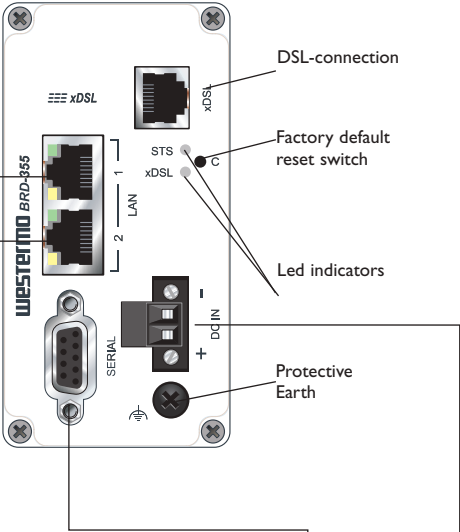


Router Serial Port (DCE Female)

Position	Name	Direction	Description
1	DCD	Out	Data Carrier Detect
2	RxD	Out	Receive Data
3	TxD	In	Transmit Data
4	DTR	In	Data Terminal Ready
5	SG	-	Signal Ground
6	DSR	Out	Data Set Ready
7	RTS	IN	Request to Send
8	CTS	Out	Clear to Send
9	RI	Out	Ring Indicator



Power connector

	2-position	Product marking	Direction	Description
	No. 1	-	Input	Common
	No. 2	+	Input	Supply voltage input DC

LED Indicators

LED	Status	Description	STS  xDSL 
STS Status	RED	Indicates a fault, except during boot-up	
	RED FLASH	Indicates a fault, except during boot-up	
	GREEN	All OK	
	GREEN & ONE RED FLASH	All OK but no VPN peer connected	
xDSL Link status	OFF	No ADSL connection	
	GREEN FLASH	Negotiating with the provider DSLAM	
	GREEN	All OK, ADSL link established	

STS LED – Status indicator

The status indicator reports the health of the unit. In normal operation the indicator will be green, however, if a fault is detected, either at boot-up or during normal operation, the indicator will light red. When the unit is first switched on or is reset, the indicator will first light red then flash red. This is normal behavior during boot-up and does not indicate a fault.

Configuring a VPN connection in the BRD-355 and activating the service will cause the STS LED to be lit GREEN but FLASH RED every third (3) second to indicate that no peer is connected on the VPN. The feature of the VPN status in the STS LED makes it easy for staff to see whether or not the VPN connection is working without having to login to the device.

DSL LED – xDSL link status

The DSL LED reports the status of the connection to the network. When powered up the indicator will be off, the indicator will then flash green whilst the unit tries to negotiate the link with the provider DSLAM, once successfully connected to the provider the indicator will light green to indicate that everything is ready and functioning on the xDSL link level.


Factory Default Reset Switch

The reset switch is used to restore the configuration of the BRD-355 to the factory default settings (for details about the default settings see the Getting started section). The switch is accessed through a small hole, adjacent to the xDSL and STS LEDs, labeled C on the front of the unit.

To reset the configuration:

- Power down the unit.
- Using a suitable tool depress the reset switch.
- Power up the unit ensuring the switch remains depressed for approximately 5 seconds after power is applied. The STS LED will flash twice to indicate a reset.
- Once the unit has booted-up it will use the default settings.

Note: Using the factory default reset switch will erase all existing configuration settings and restore the factory default settings.

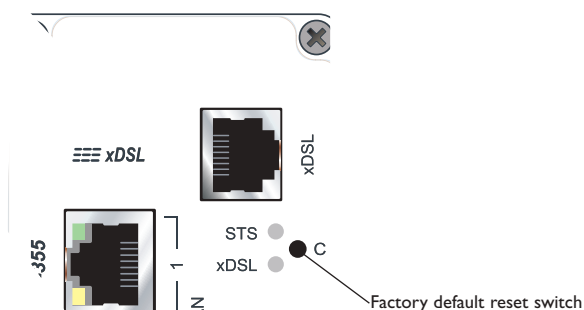

Protocols and Functionality

Ethernet Technologies	IEEE 802.3 for 10BaseT IEEE 802.3u for 100BaseTX Layer-2 QoS IEEE 802.1p Class of Service
xDSL Technologies	RFC2684 Bridged LLC and Bridged VC-MUX ATM encap. (ADSL) TR-067 Compliance Dying Gasp support ITU K.21 Support Rate adaptive modem at 32 Kbps steps ATM Layer with traffic shaping QoS support (UBR, CBR, VBR-rt,VBR-nrt) AAL5 – AAL F5 OAM Loopback/Send and receive RFC2364 PPPoA client support RFC2516 PPPoE client support RFC2225 / RFC1577 Classical IP Support PAP/CHAP/MS-CHAP for Password Authentication support
Serial Port Technologies	RS-232 Serial Over IP (Serial Extender and Virtual Serial Port) Modem emulation AT command interpreter MODBUS DNP3
IP Routing, Firewall, VPN and Cyber Security	Static IP routing Dynamic IP routing • RIPv1/v2 VRRP GRE Stateful inspection Firewall / ACL, NAT, Port Forwarding 25 x IPsec VPN, PSK & X.509 1 x L2TP client 1 x PPTP client 1 x OpenVPN / SSL VPN client RADIUS PPP Dial in/Dial out
Manageability	Management tools • Web-interface (HTTP and HTTPS) • Command Line Interface (CLI) via SSHv2 and TELNET • SNMPv1/v2c/v3 Syslog (log files) SNTP (NTP client) DHCP client DHCP server DDNS (Dynamic DNS update client)

For more information on the features and functionality, please refer to the Management Guide on the product website.


Getting started

Power Supply

The BRD-355 requires a DC power source in the voltage range of 10 to 60 VDC. The unit is designed to self protect from permanent damage if the voltage exceeds 60 VDC or if reverse polarity is applied. The router may need to be returned for service if this occurs. The router can also be damaged if there is any potential difference between the chassis-ground, RS-232 signal ground or power (–) input. Before connecting any wiring, ensure all components are earthed to a common ground point. An external isolator will be required if a positive earth power supply is used.

Ethernet

The Ethernet ports are on the front of the unit and are marked LAN 1 and LAN 2, each port has a LED indicating the connection speed and a LED indicating activity as shown in figure below. Both ports are capable of auto-negotiation, meaning cross-over cables are not required. The Ethernet ports are switched, allowing more than one Ethernet device to be connected to the unit at one time.

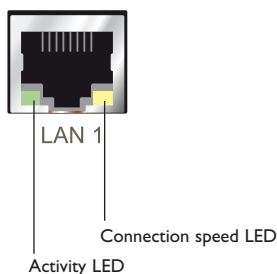

Configuration

Accessing and Using the Web Interface

All configuration of the BRD can be done via the web interface. In order to view the web pages a computer with a fixed IP address, on the same sub-net as the BRD, will need to be connected to one of the LAN ports.

The default IP settings of the BRD are:

- IP Address: 192.168.2.200
- Netmask: 255.255.255.0

The recommended IP settings for the PC used to configure the BRD Router:

- IP Address: 192.168.2.100
- Netmask: 255.255.255.0
- Default Gateway: 192.168.2.200
- Primary DNS: 192.168.2.200

Note: Although it is possible to connect the BRD directly to a Local Area Network (LAN) it is recommend that the network configuration as described in this section is performed prior to doing so. The DHCP server of the unit is by default disabled.

Accessing the BRD

- Open a web browser on the PC and browse to <http://192.168.2.200> (the default MRD, IP address) .
- A login box will popup. If the box fails to display, re-check the cable connections to the unit and the IP address settings of the PC.

Enter the following login details:

- User Name: **admin**
- Password: **westermo**

- The Status summary page will be displayed, it will be similar to Figure 3.

Figure 3


Status	System	Wireless	Network	Routing	Firewall	VPN	Serial Server
Alarms	Wireless	LAN	VPN	Serial Server	System Log		
Logged in as admin Host: MRD-310-60-00-01							
Alarms				10:00:28 30/09/2008			
System							
Power On Self Test				Passed			
Temperature (°C)				now: 38.00, min: 38.00, max: 38.25			
Uptime				00:03:52			
Wireless							
Network Status				Fault			
Connection Status				Fault			
Network							
LAN				No Fault			
Services							
DHCP Server				Disabled			
VPN				Disabled			
Serial Server				No Fault			

Note: If the unit is not yet configured it is likely that the Network Status and Connection Status will indicate a fault condition. This is normal.

Mounting


This unit should be mounted on 35 mm DIN-rail, which is horizontally mounted inside an apparatus cabinet or similar. Snap on mounting, see figure.

Mounting the BRD-355 with integrated DIN-clip:

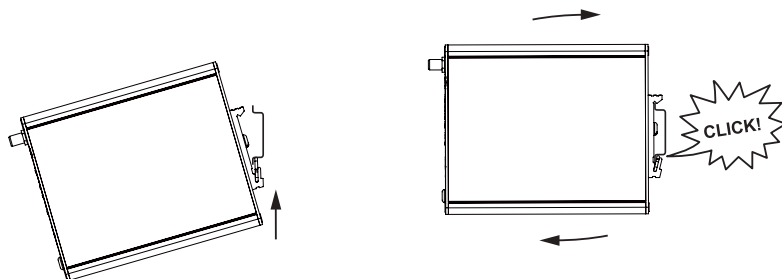


Cooling

This product uses convection cooling. To avoid obstructing the airflow around the product, use the following spacing rules. Minimum spacing 25 mm (1.0 inch) above / below and 10 mm (0.4 inches) left / right the product. Spacing is recommended for the use of product in full operating temperature range and service life.

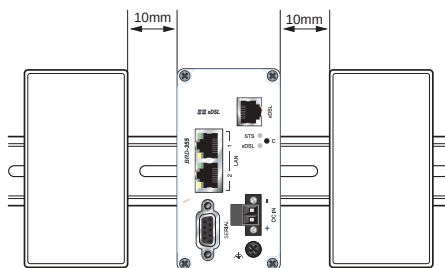

Dimensional drawing

Measurements are stated in millimeters.

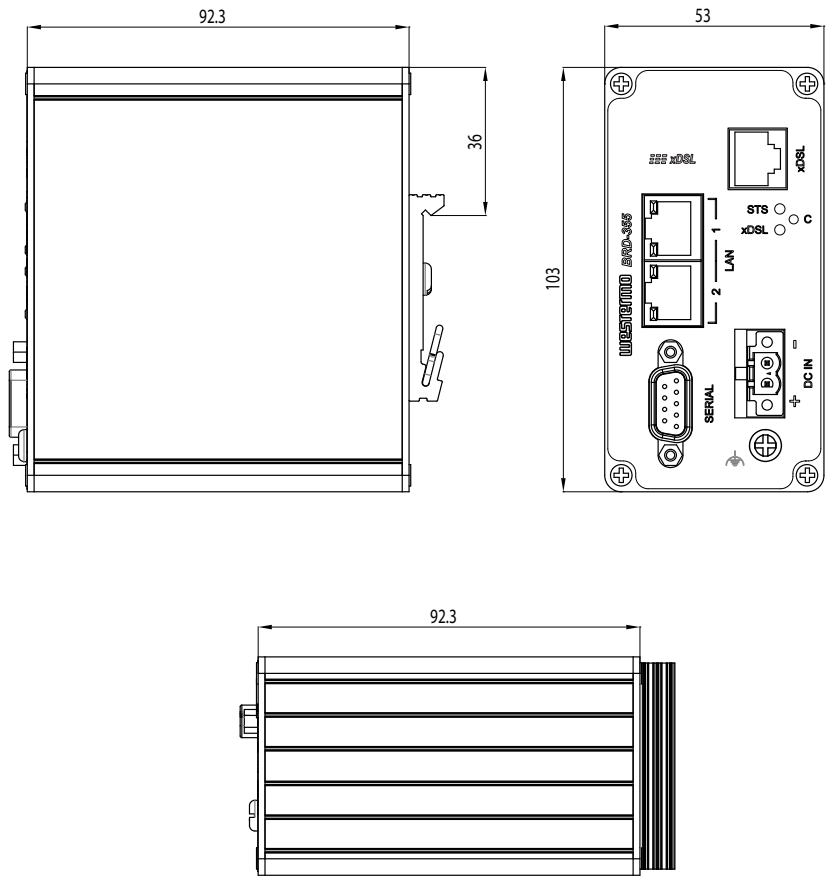

Westermo

Westermo • Metallverksgatan 6, SE-721 30 Västerås, Sweden

Tel +46 16 42 80 00 Fax +46 16 42 80 01

E-mail: info@westermo.com

www.westermo.com